

Trinitron Color TV

Operating Instructions _____

GB


- Before operating the unit, please read this manual thoroughly and retain it for future reference.

FD Trinitron
WEGA

KV-XJ29

WARNING


- Dangerously high voltages are present inside the TV.
- Operate the TV only between 110 - 240 V AC.

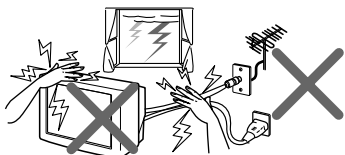


For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.




For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

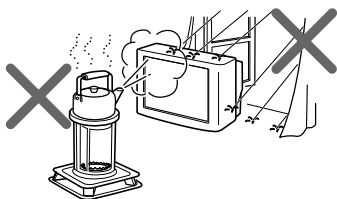


To prevent fire or shock hazard, do not expose the TV to rain or moisture.

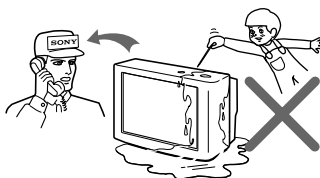


Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

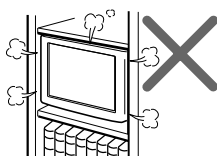


Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

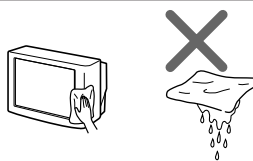


Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.

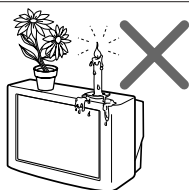


Do not place any objects on the TV.

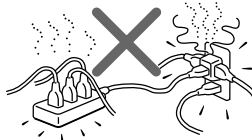

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

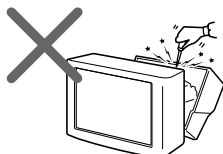

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

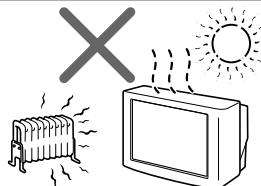

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

Table of Contents

Using Your New TV

Getting Started	4
Step 1: Connect the antenna	4
Step 2: Insert the batteries into the remote	5
Step 3: Preset the channels automatically	5
Connecting optional components	6
Securing the TV	8
Presetting channels	9
Watching the TV	12


Advanced Operations

Customizing the picture and sound	15
Viewing your favorite channels	18
Blocking the channels (CHILD LOCK)	19


Additional Information

Self-diagnosis function	20
Troubleshooting	21
Overview of controls	24
Specifications	Back cover

WARNING (continued)

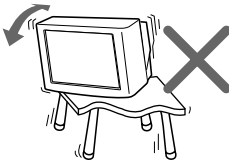

 Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.




Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

Getting Started

Step 1


Connect the antenna

If you wish to connect a VCR, see the **Connecting a VCR** diagram below.

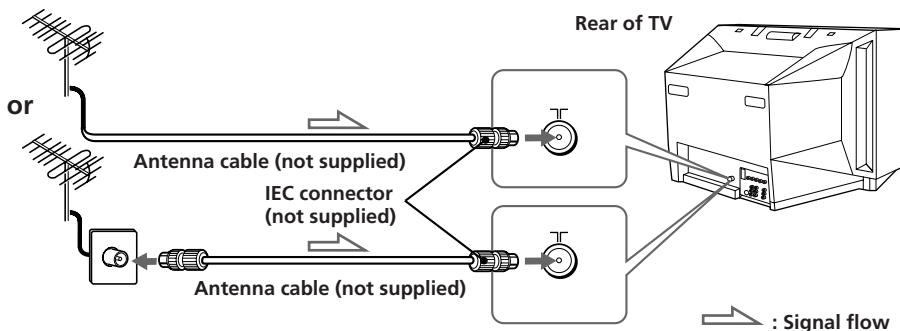
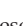




Connecting a VCR

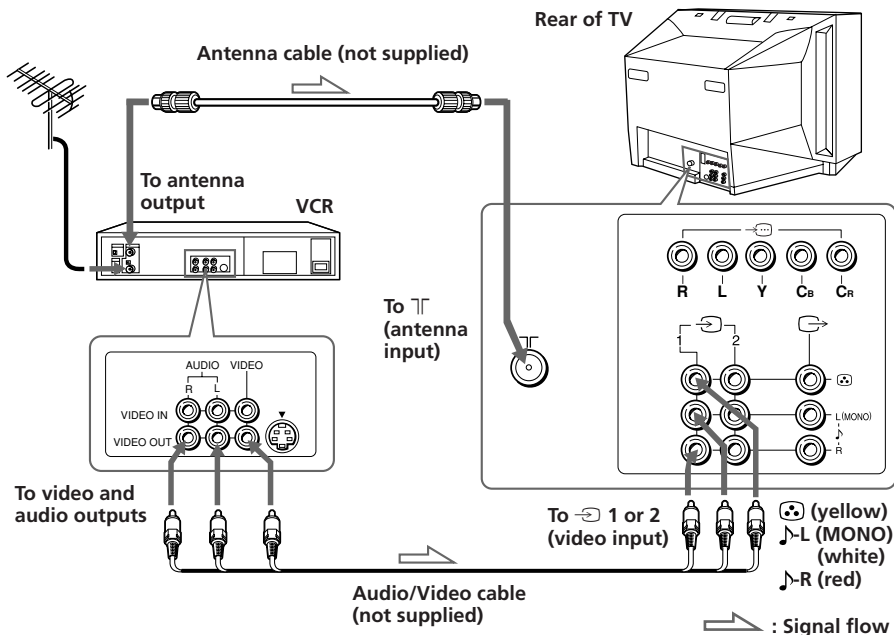To watch the video input, press (see page 13).




Notes

- If you connect a monaural VCR, connect the yellow plug to  (the yellow jack) and the black plug to  (MONO) (the white jack).
- If you connect a VCR to the  (antenna input) terminal, preset the signal output from the VCR to the program number 0 on the TV.
- Do not connect video equipment to the  2 (video input) jacks at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.
- When no signal is input from the connected video equipment, the TV screen becomes blue.

CAUTION


- Do not connect the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

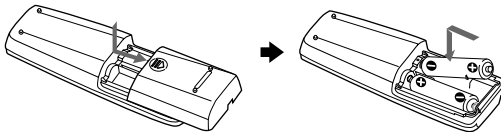Step 2**Insert the batteries into the remote****Note**

- Do not use old batteries nor use different types of batteries together.

Step 3**Preset the channels automatically**

Front of TV

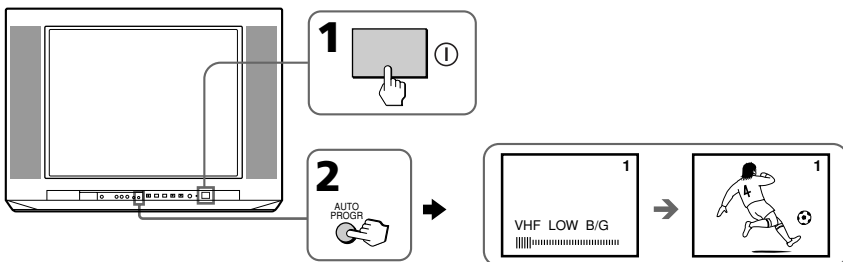**Tips**

- If you want to stop automatic channel presetting, press SELECT twice.
- If your TV has preset an unwanted channel or cannot preset a particular channel, then preset your TV manually (see page 10).

Note


- During automatic channel presetting, your TV screen will indicate "B/G", "I", "D/K" or "M" for the TV system.

Connecting optional components



You can connect optional audio/video components, such as a VCR, multi disc player, camcorder, video game or stereo system.

To watch the video input of the connected equipment, press  (see page 13).

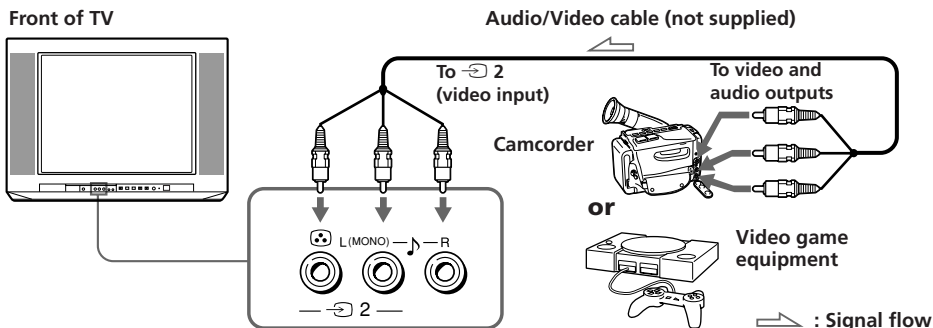
Connecting a camcorder/video game equipment using the (video input) jacks




Notes

- You can also connect video equipment to the  1 or 2 (video input) jacks at the rear of your TV.
- Do not connect video equipment to the  2 (video input) jacks at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting audio/video equipment using the (monitor output) jacks

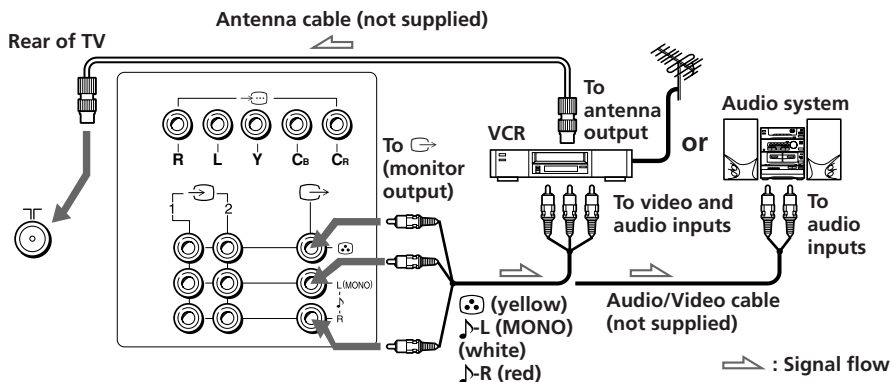


Note

- If you select "DVD" on your TV screen, the signal from the  (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Connecting a DVD player using the (component video input) jacks

- 1 Connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.
- 2 Using a component video cable, connect Y, C_B, and C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

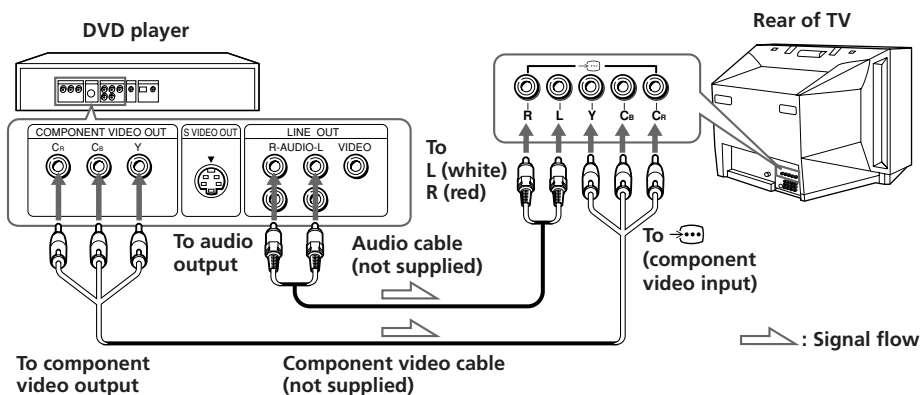

Notes

- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C _B (blue)	C _b , B-Y or P _B
C _R (red)	C _r , R-Y or P _R

- Since the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, adjust the sharpness ("SHARP") (see page 16).


Securing the TV

To prevent the TV from falling, secure the TV using one of the following methods:

- A** With the supplied screws, attach the band to the TV stand and to the rear of the TV using the provided hole.

or

- B** Put the cord or chain through the clamps to secure the TV against a wall or pillar.

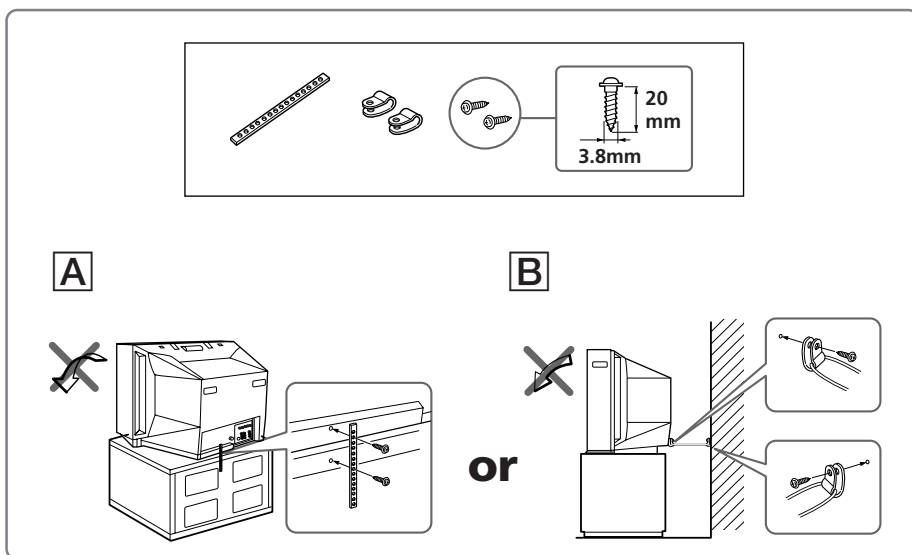


Note

- Use only the supplied screws. Use of other screws may damage the TV.


Presetting channels

You can preset up to 100 TV channels in numerical sequence from program number 1 using the remote and the buttons on your TV as well.

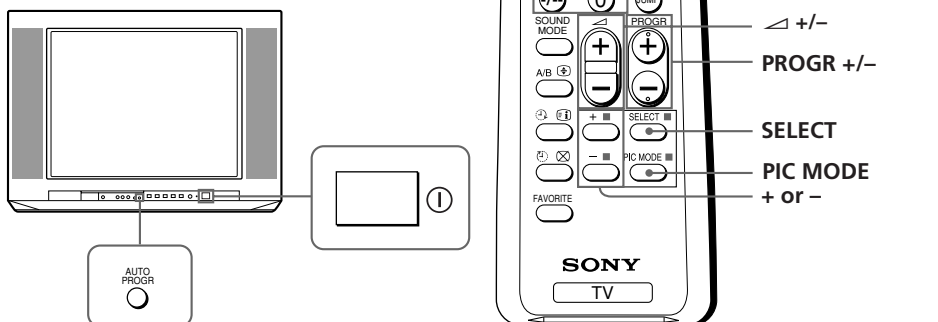

Presetting channels automatically

 - 1 Press ① to turn on the TV.



- 2 Press AUTO PROGR.



VHF LOW B/G
|||||

Note

- During automatic channel presetting, your TV screen will indicate "B/G", "I", "D/K" or "M" for the TV system.

To preset channels automatically from a specified program number

- (1) Press SELECT until "AUTO PROGRAM" appears.
- (2) Press + or - to enter the "AUTO PROGRAM" mode.
The on-screen display will start flashing.
- (3) Press PROGR +/- or the number buttons until the desired program number appears.
- (4) Press + or - to start presetting channels automatically.

continued

Presetting channels (continued)

 
Presetting channels manually

- 1** Press SELECT until "MANUAL PROGRAM" appears.



MANUAL PROGRAM


- 2** Press + or – to enter the "MANUAL PROGRAM" mode.




VHF LOW B/G

- 3** Press PROGR +/- or the number buttons until the desired program number appears.

 
PROGR



or

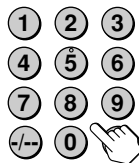

 - 4** Press + or – until the desired channel picture appears.



- 5** Press SELECT to exit the "MANUAL PROGRAM" mode.



To change the TV system setting

If the picture or sound is abnormal when receiving programs through the ㄗ (antenna input) terminal

- (1) Press SELECT until "TV SYS" appears.

TV SYS: B/G


- (2) Press + or – to select the appropriate TV system until the picture or sound quality is optimal.



To change the color system setting

If the color is abnormal when receiving programs through the ㄗ (antenna input) terminal or the ㊚ (video input) jack.

(1) Press SELECT until "COLOR SYS" appears.

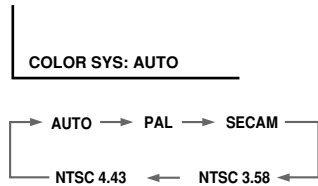

(2) Press + or – to select the appropriate color system until the color is optimal.

Tip

- Normally set "COLOR SYS" to "AUTO".

Skipping program numbers

1 Press PROGR +/- or the number buttons until the unused or unwanted program number appears.

2 Press SELECT until "MANUAL PROGRAM" appears.

3 Press + or – to enter the "MANUAL PROGRAM" mode.

4 Press PIC MODE.

5 Press SELECT to exit the "MANUAL PROGRAM" mode.

To restore the skipped program number again

Preset the channel automatically or manually.

Tip

- You can also use SELECT and ㄗ +/- on the TV to preset channels and skip program numbers.


To use the fine tuning (FINE) function



The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.


You can use the fine tuning function as below:

- (1) Select the program number you want to adjust.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or – on the remote control once.
- (4) Press ㊚ to display "FINE" on the screen.
- (5) Press + or – continuously until the above problems are minimized.
The + or – icon on the screen flashes while tuning.
- (6) Press SELECT to return to normal screen.

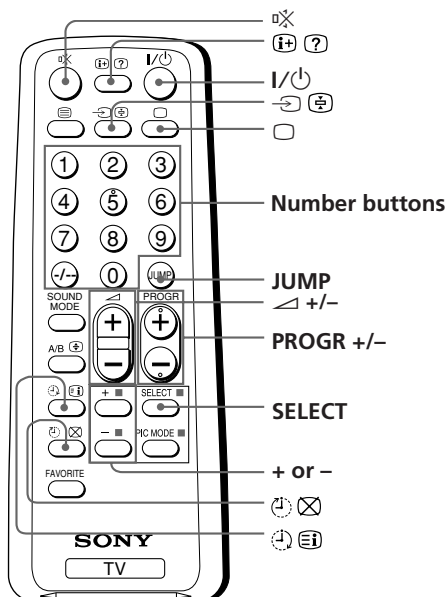
This section explains functions used while watching the TV. Most operations can be done using the remote.



 
- When the TV is in the standby mode (the  indicator on the TV is lit red), press **I/** on the remote or **PROGR +/-** on the TV.



 - For double digit numbers, press -- , then the number (e.g., for 25, press -- , then 2 and 5).



or

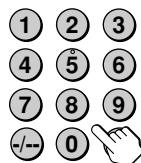

- 

Additional tasks

To	Press
Turn off temporarily	I/⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	Ⓛ on the TV.
Mute the sound	⏸.
Watch the video input (VCR, camcorder, etc.)	⏮ to select "VIDEO 1", "VIDEO 2" or "DVD". To return to the TV program, press ⏮.
Jump back to the previous program number	JUMP.
Display the on-screen information*	Ⓛ+.
Adjust the volume of all program numbers automatically	SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or – to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen	SELECT repeatedly until "PIC ROTATION" appears, then press + or – to adjust the alignment of the picture position. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> PIC ROTATION ⏴⏵⏴⏵ </div> <p>The ⏴⏵ or ⏴⏵ icon on the screen flashes while adjusting.</p>

* The picture, sound, and either the program number or video input are displayed. The on-screen display for the picture and sound information disappears after about three seconds.

Changing the on-screen display language

1 Press SELECT until "LANGUAGE/ اللغة: ENGLISH" appears on the screen.

LANGUAGE / اللغة: ENGLISH

2 Press + or – to select "عربي".

LANGUAGE / اللغة: عربي

Tip

- You can also use SELECT and ⏴/⏵ on the TV to select the on-screen display language.

continued